



PARTS LIST

**Remote Engine Starter Unit Kit
P/N 08E91-E22-100B**


Transmitter

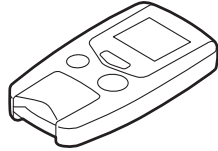

Control unit

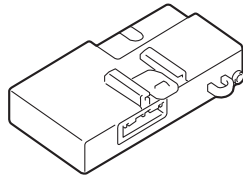

Antenna

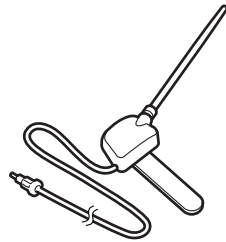


Key ring




Protective tape




Engine starter label

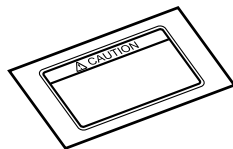


Fuse label

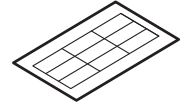

Accessory User's Information Manual

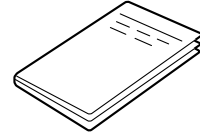


Quick Start Guide

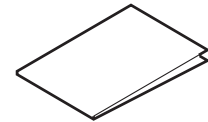


**Remote Engine Starter Attachment Kit
P/N 08E92-SNA-100B**


Engine starter harness

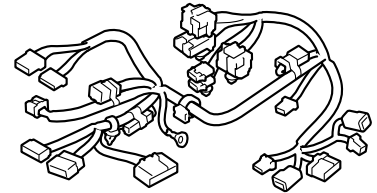


Control unit bracket

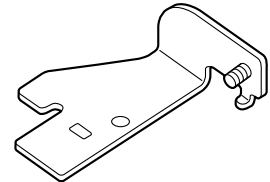


Relay bracket

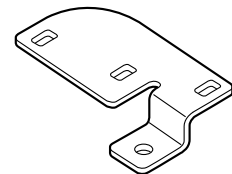


3 Black relays (4-pin)

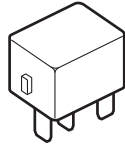

18 Wire ties

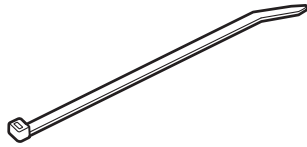

7 Foam cushion tapes

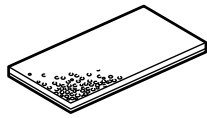


Flange nut




Clip



Green relay (5-pin)

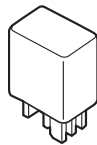

Template

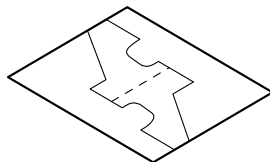

TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Long blade flat-tip screwdriver

Small flat-tip screwdriver

6 mm Hex wrench

T25 Torx bit

3 mm and 7 mm Drill bits

File

Ratchet

10 mm Socket

Combination wrench

Isopropyl alcohol

Shop towel

Tape measure

Clip remover

Diagonal cutters

Felt-tip pen

Punch

Scissors

2 Pairs of needle nose pliers

Rubber mallet


HDS (Honda Diagnostic System)

Masking tape

Safety goggles

Scale

Illustration of the Remote Engine Starter System Installed on the Vehicle

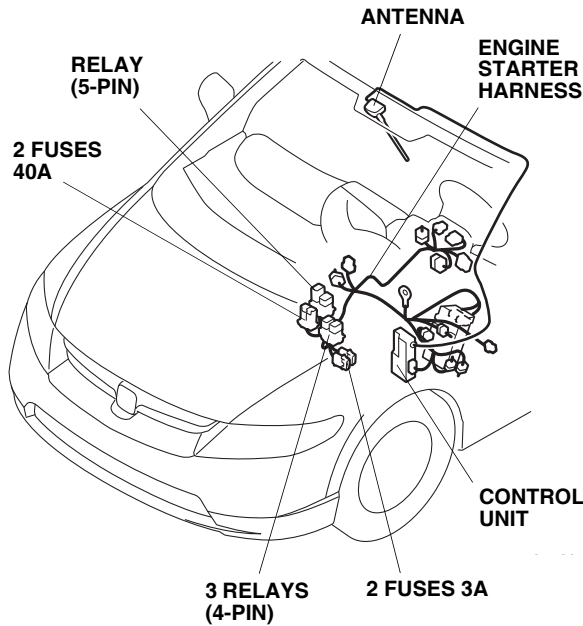

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE: This antenna should be installed only if the ambient air temperature 15°C (60°F) or above.


1. Make sure you have the anti-theft code for the radio, then write down the radio station presets.
2. Disconnect the negative cable from the battery.

Setting the Control Unit

3. Get the control unit. Using a small flat-tip screwdriver, set the switches on the control unit to the positions shown. Using isopropyl alcohol on a shop towel, clean the area where the protective tape will attach. Attach the protective tape to the control unit over the switches.


NOTE:

- The switches must be set before the control unit is plugged in.
- If the switch settings are not correct, the engine starter will not operate correctly.
- If you are setting the switches when the control unit is installed in the vehicle, touch a metal part of the screwdriver to a metal part of the vehicle beforehand to discharge any static electricity.
- If you change the switch settings with the unit connected, you must disconnect the unit then reconnect it before the new settings are recognized.

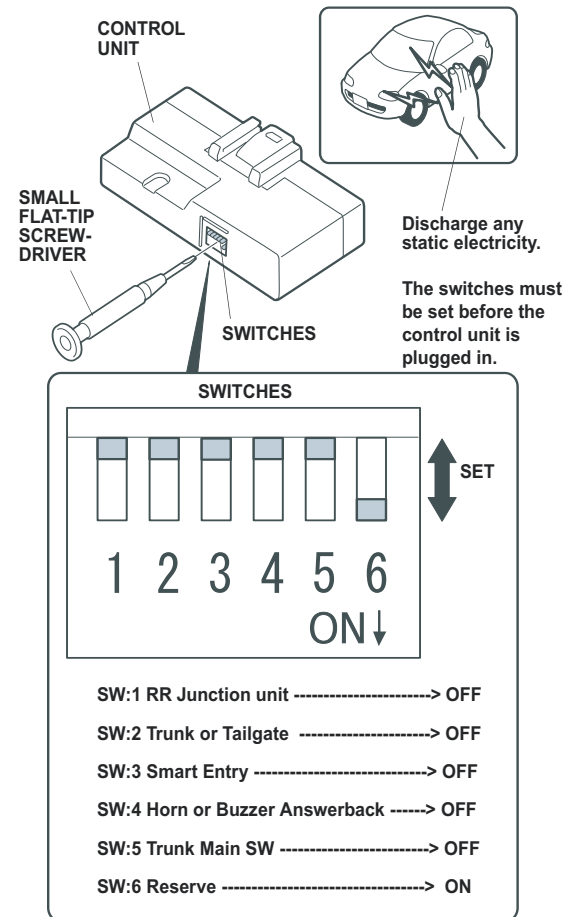


Removing the Vehicle Parts

4. Remove the trunk lid/fuel fill door opener cover (six retaining tabs). Remove one self-tapping screw.

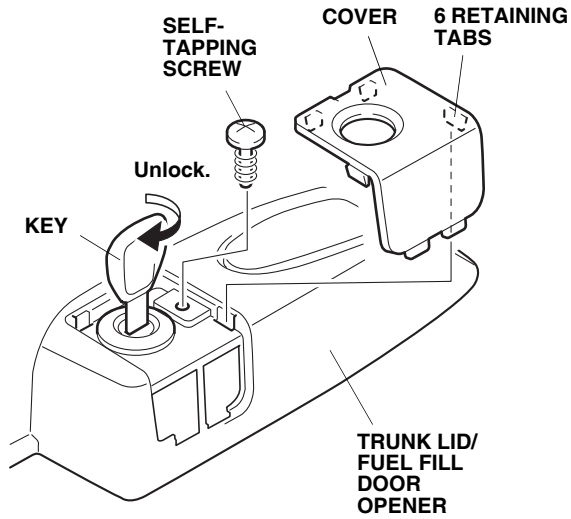


5. Using the key, unlock the opener.


6. Remove the left front door sill trim (two retaining tabs, five clips, and three hooks).

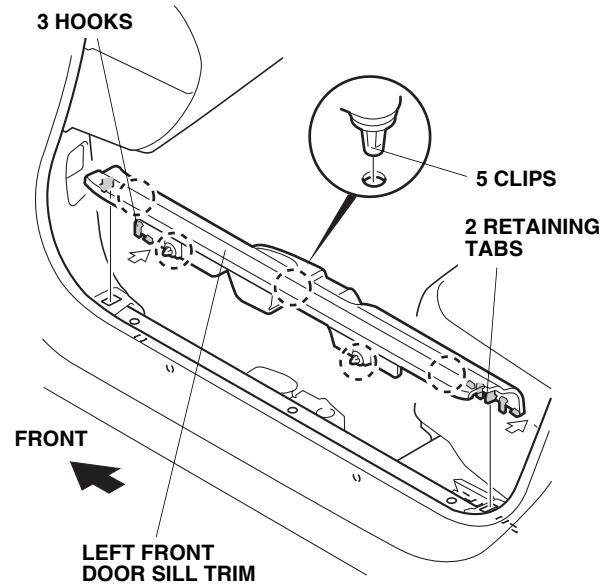


7. Pull away the weatherstrip, and remove the left kick panel (two clips).

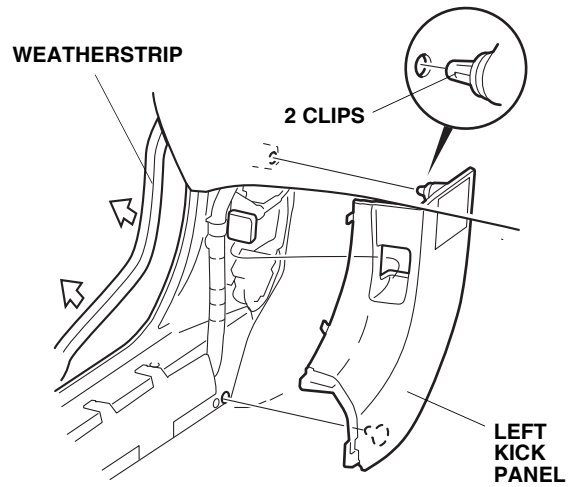


- If equipped, remove the driver's dashboard under cover (turn the knob counterclockwise, and release the two clips and pin).

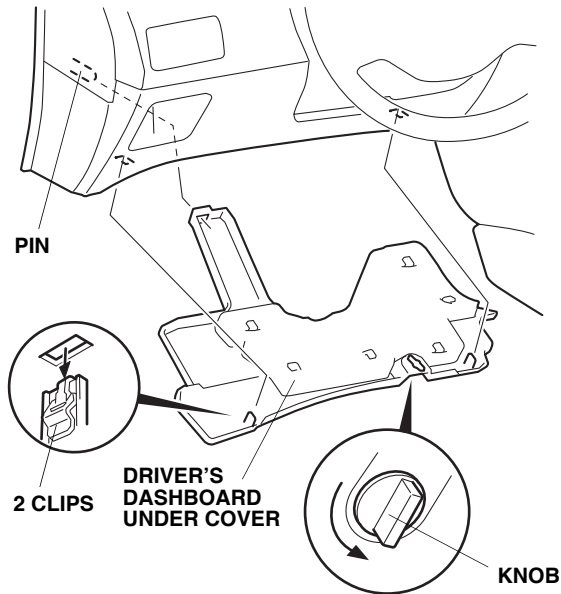

- Remove the driver's dashboard lower cover (eight clips).

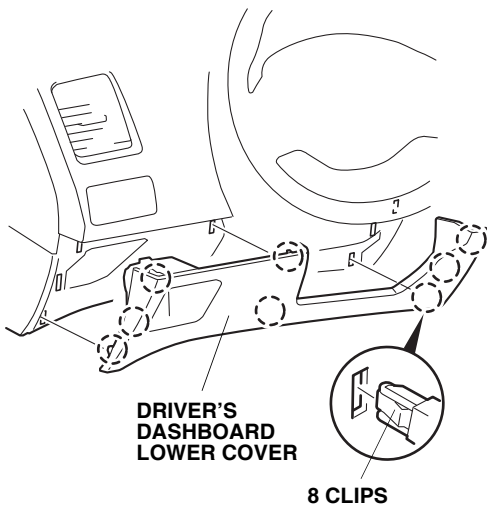


- Lower the tilt lever, and pull the steering wheel toward you. Insert a long blade flat-tip screwdriver along the guide of the column lower cover, and pry the retaining tab of the column upper cover.

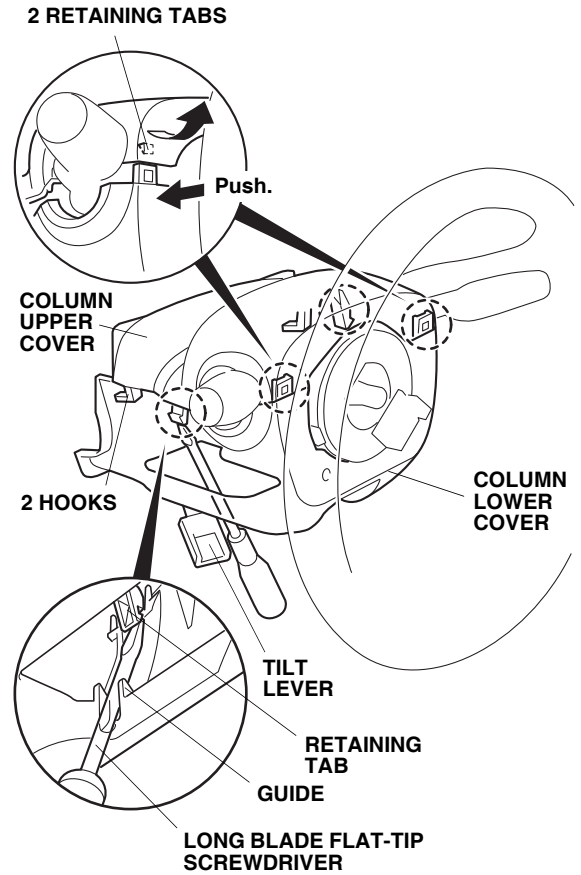


- Push on the column lower cover in the area shown to separate the column upper cover from the column lower cover (two retaining tabs). Pull up to remove the column upper cover (two hooks).


- Remove the column lower cover (two self-tapping screws and one screw).

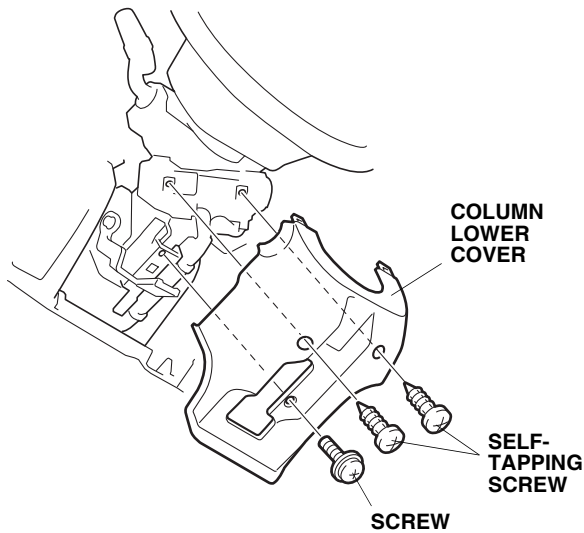


- If equipped, use a small flat-tip screwdriver to remove the left and right lenses from the map light console (four retaining tabs for each lens). Remove the two bolts, and then release the map light console.

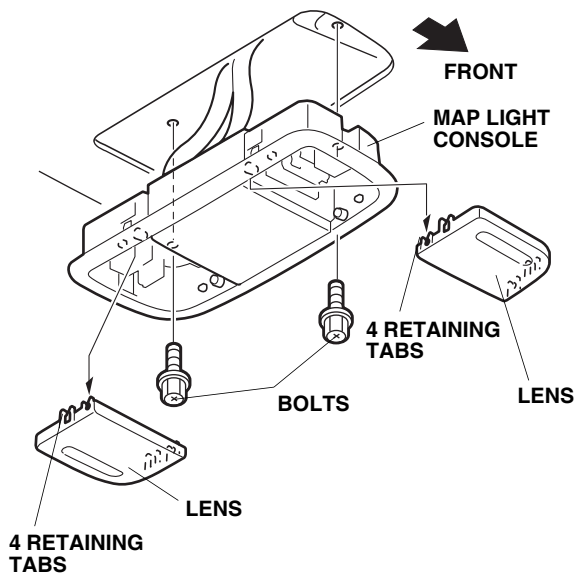

- Remove the sunvisor holders. Using a small flat-tip screwdriver, push the hook, and turn the holder 90°, then pull it out.

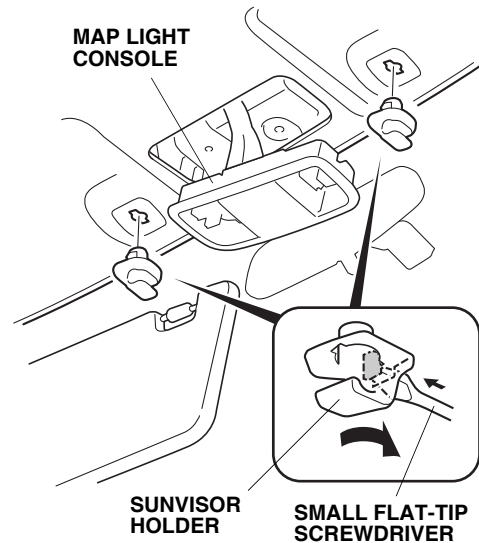


- Remove the cap from the left sunvisor (four retaining tabs).

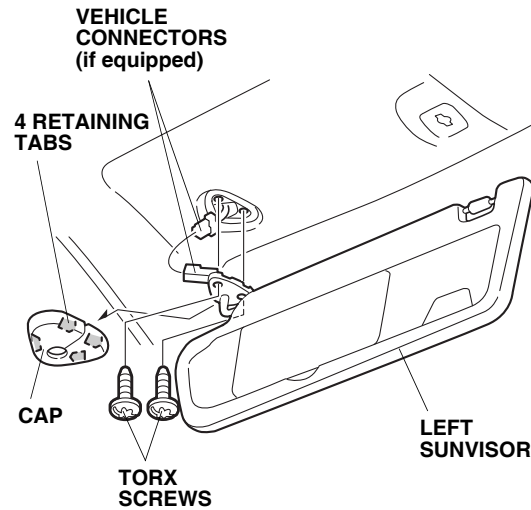


- Remove the left sunvisor (two T25 Torx screws, and unplug the vehicle connectors, if equipped).

17. Pull away the weatherstrip from the driver's A-pillar trim.

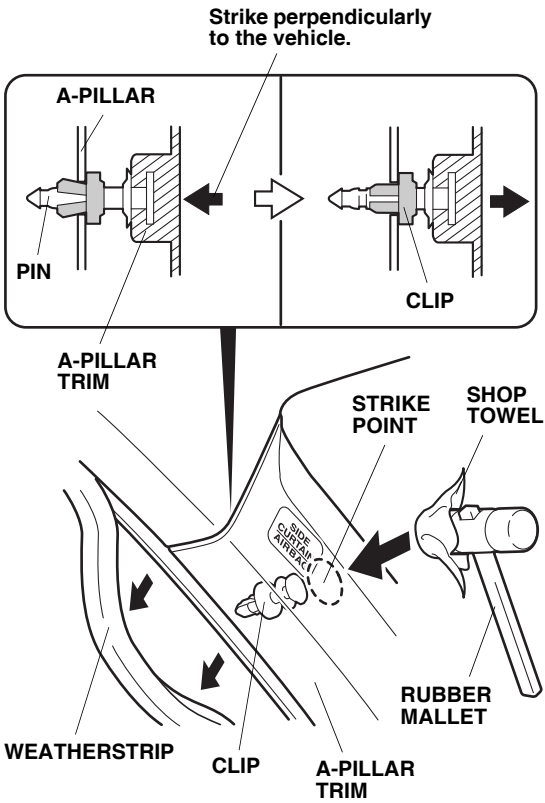


18. Using a rubber mallet and a shop towel, gently tap the driver's A-pillar trim at the position shown to release the clip. Gently tap the pillar trim just below the "SIDE CURTAIN AIRBAG" mark.

19. Pull away the weatherstrip from the driver's A-pillar trim. Remove the trim (two clips).

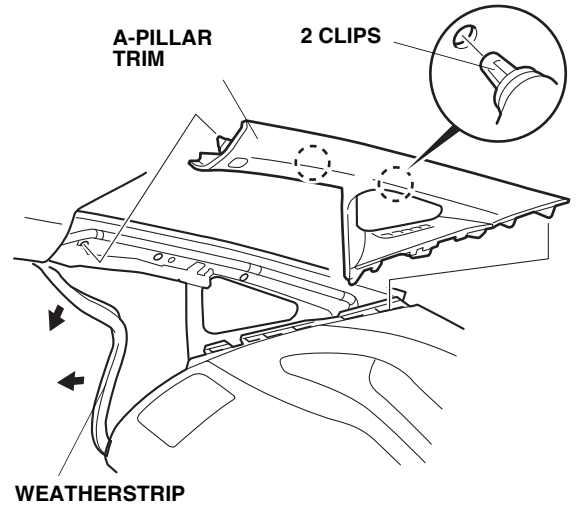


20. Remove the clip from the driver's A-pillar, and install a new clip.

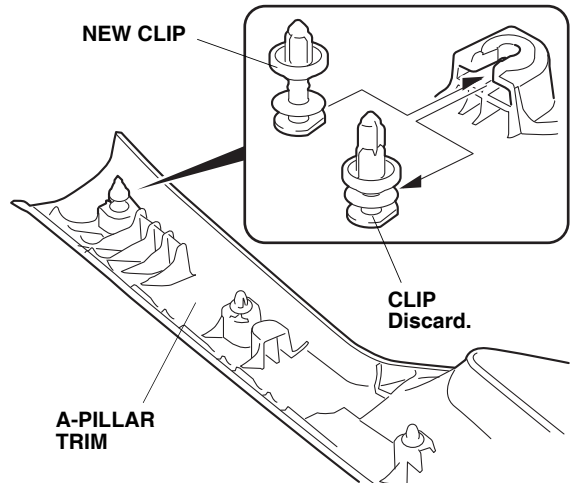


Installing the Antenna



21. Using scissors, cut out the template.

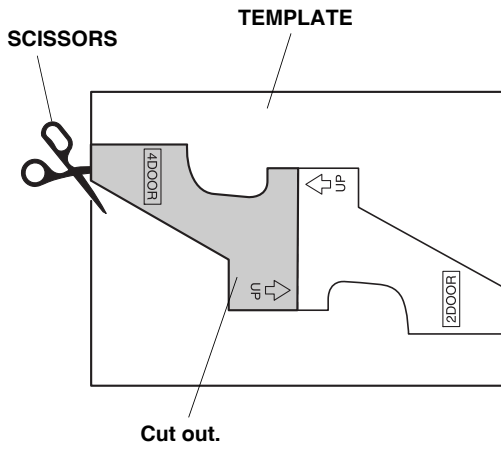


22. Secure the template to the windshield with the masking tape by aligning it with the edge of the black ceramic paint as shown.

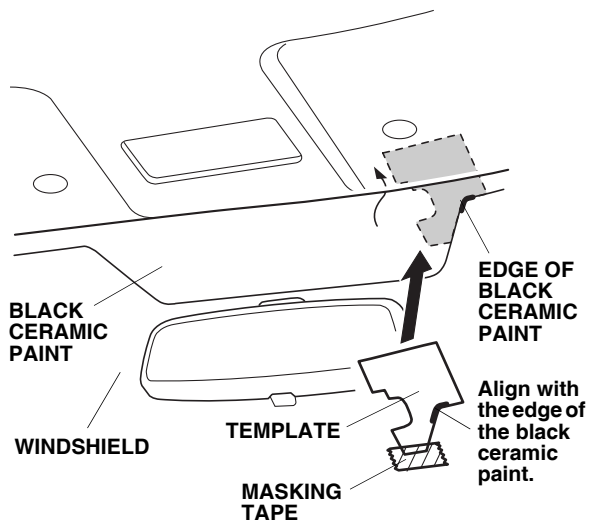


23. Using two pairs of needle-nose pliers, bend the antenna plate according to the illustration and measurement shown.

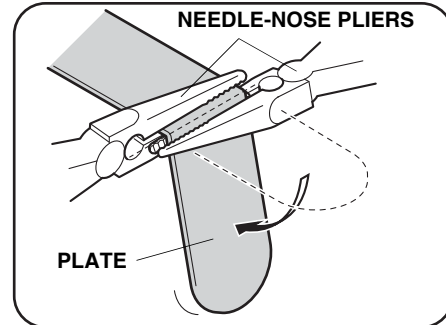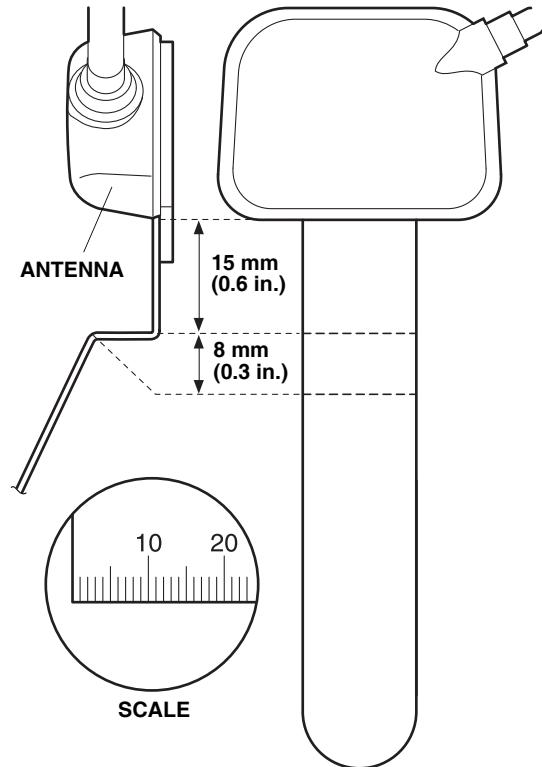

24. Measure the antenna cable as shown. Attach three foam cushion tapes to the antenna cable at the measurements shown.

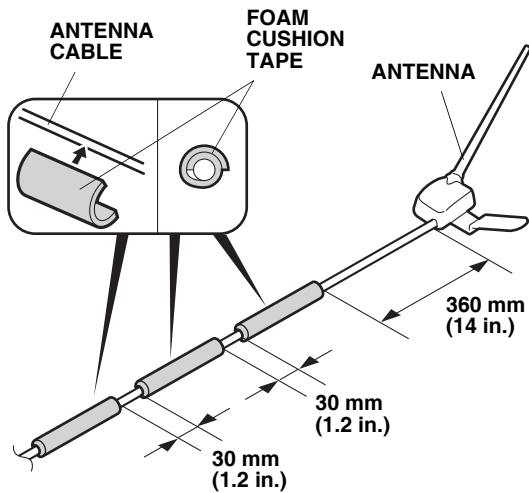


25. Using isopropyl alcohol on a shop towel, clean the area where the antenna will attach. Allow to dry before proceeding.

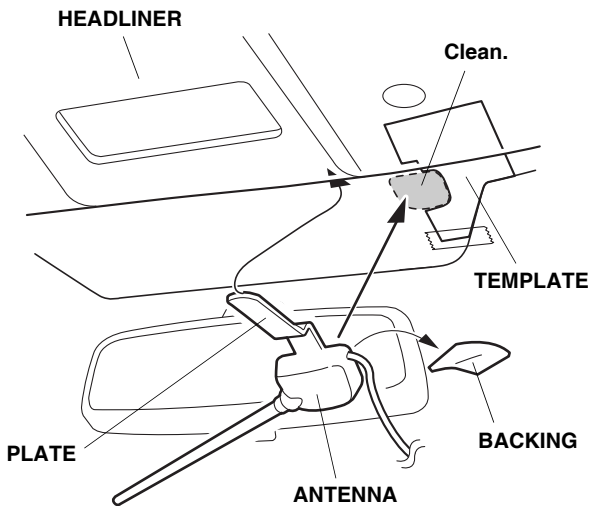


26. Remove the backing from the antenna, insert the antenna plate under the headliner, and attach the antenna to the windshield in alignment with the template.
27. Remove the template.


28. Route the antenna cable under the headliner towards the driver's side of the vehicle, and down along the vehicle harness. Be careful not to crease the headliner.

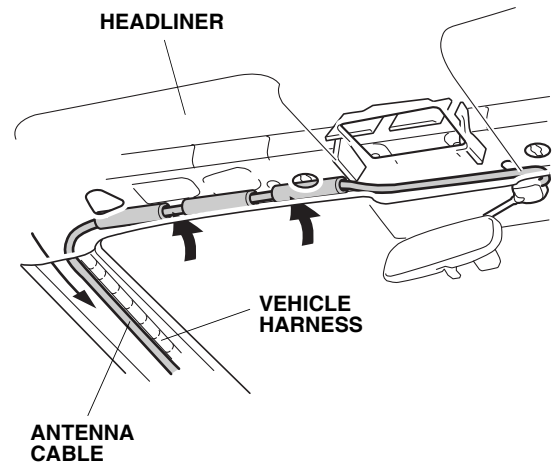


29. Continue routing the antenna cable between the A-pillar and the dashboard.

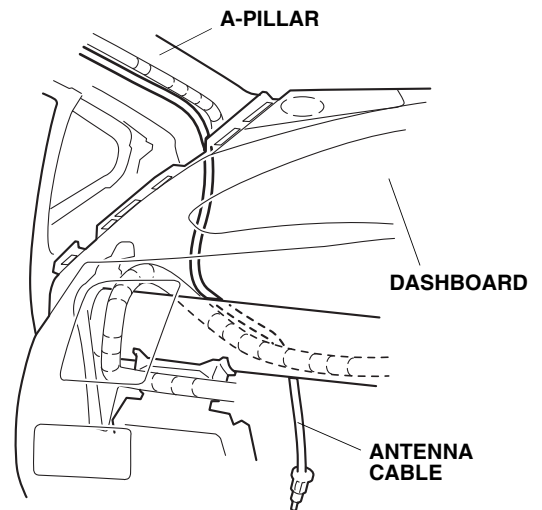


30. Using isopropyl alcohol on a shop towel, clean the areas where the foam cushion tapes will attach. Under the headliner, secure the antenna cable to the roof panel with foam cushion tapes (cut one foam cushion tape in half) in the areas shown.

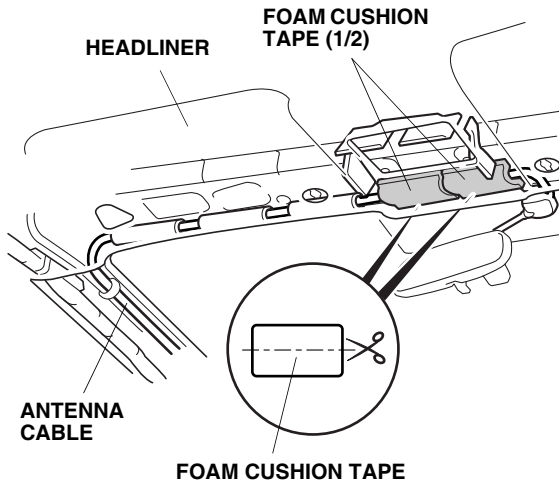

31. Secure the antenna cable to the vehicle harness with four wire ties as shown. Do not secure the antenna cable to the drain tube.

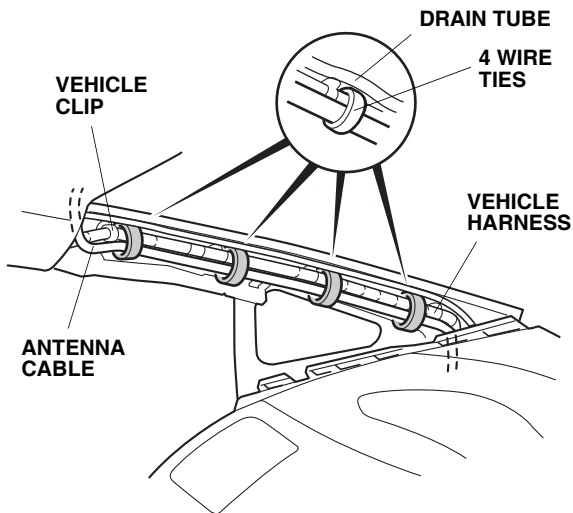


32. Secure the antenna cable to the vehicle harness with one wire tie. Secure the wire tie between the vehicle harness branching points.

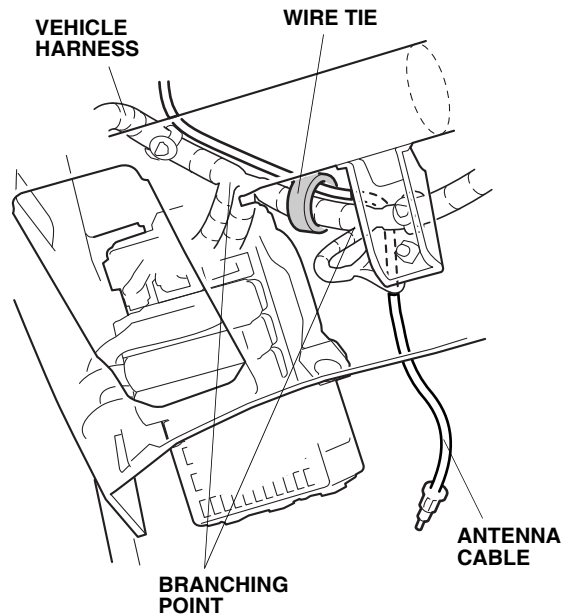


Installing the Control Unit Bracket

33. Locate the small square hole next to the small round hole in the dashboard support bracket. Attach the control unit bracket to the dashboard support bracket using a flange nut. If the vehicle is equipped with a moonroof, be careful not to pull on the drain tube.

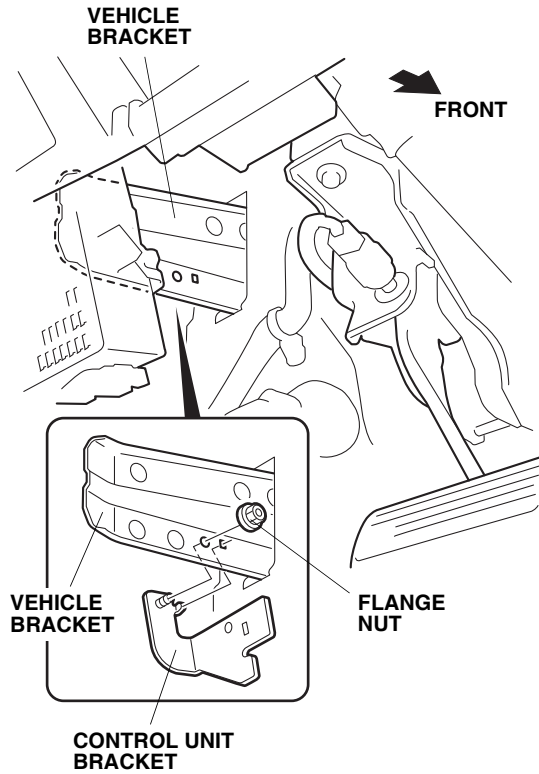


Routing the Engine Starter Harness

34. Using isopropyl alcohol on a shop towel, clean the areas where the fuse labels will attach. Attach the 3A fuse labels to the engine starter harness fuse case, and the 40A fuse labels to the fuse block.

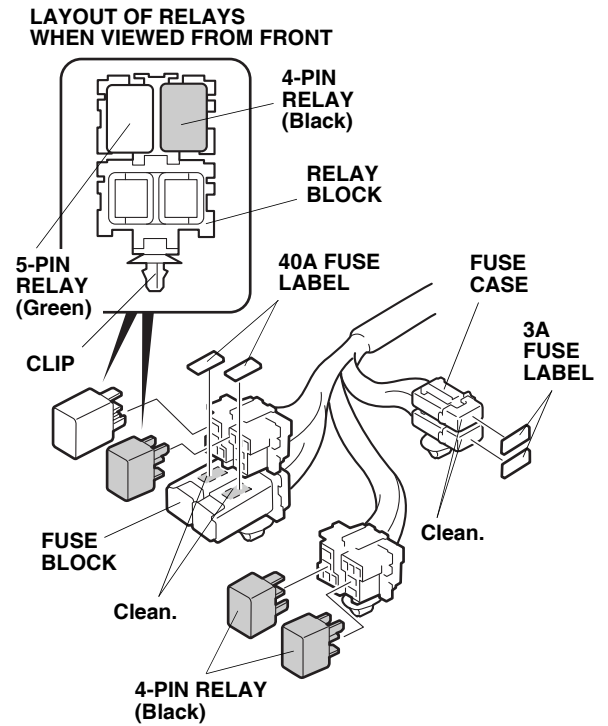

35. Install the four relays to the engine starter harness relay blocks. Be careful to install the relays properly, or a malfunction will result.


36. Route the engine starter harness 7-pin connectors up the steering column and to the ignition switch. Unplug the white vehicle 7-pin connector. Plug the white engine starter harness 7-pin connectors in between the vehicle 7-pin connectors.

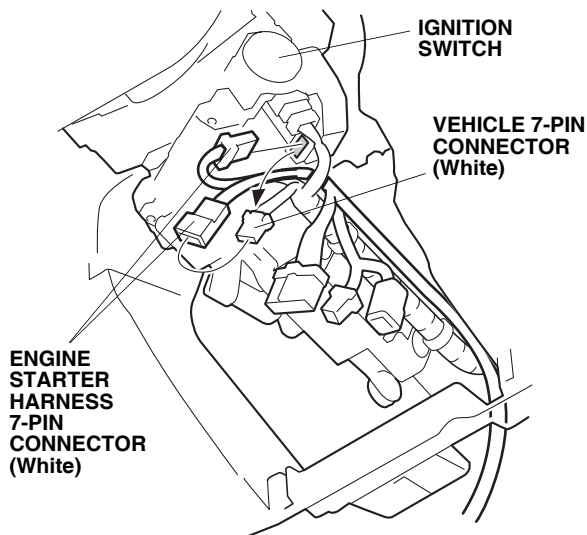


37. Unplug the brown vehicle 7-pin connector, and plug the brown engine starter harness 7-pin connector into the vehicle connector.

NOTICE


Check that the engine starter harness 7-pin connector (brown) is securely connected to the vehicle connector. A loose connector can cause the engine to stall.

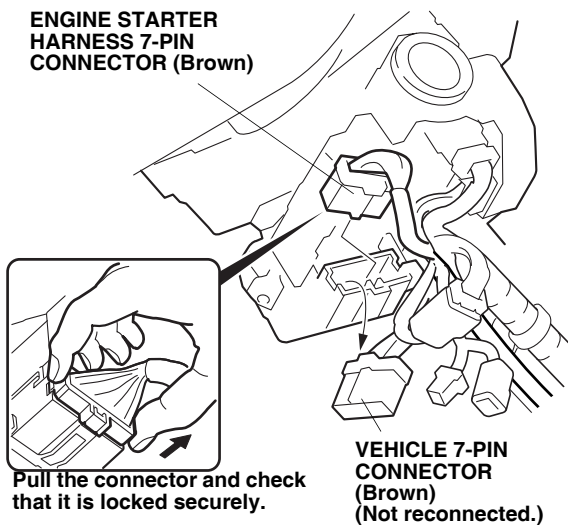


38. Disconnect the vehicle 8-pin connector on the rear of the wiper switch and plug the engine starter harness 8-pin connector into the vehicle 8-pin connectors.

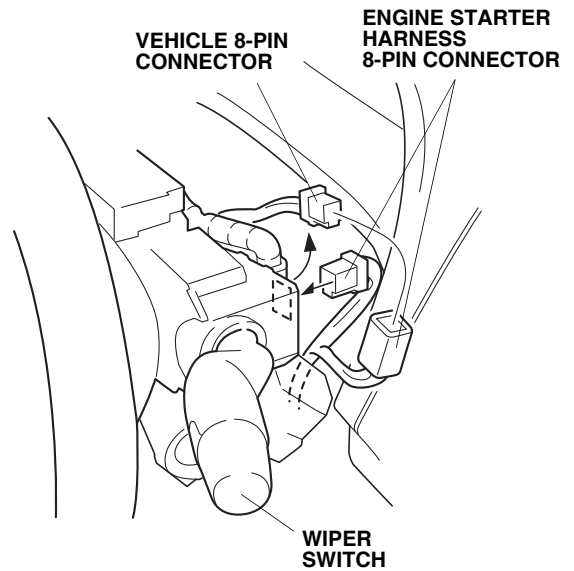


39. Secure the 8-pin connector to the engine starter harness with one wire tie.

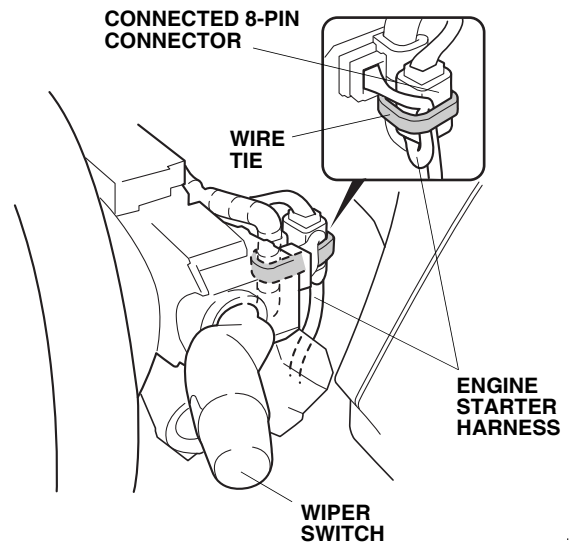


40. Wrap the vehicle 7-pin connector with one foam cushion tape, then place the vehicle 7-pin connector into the gap of the column.

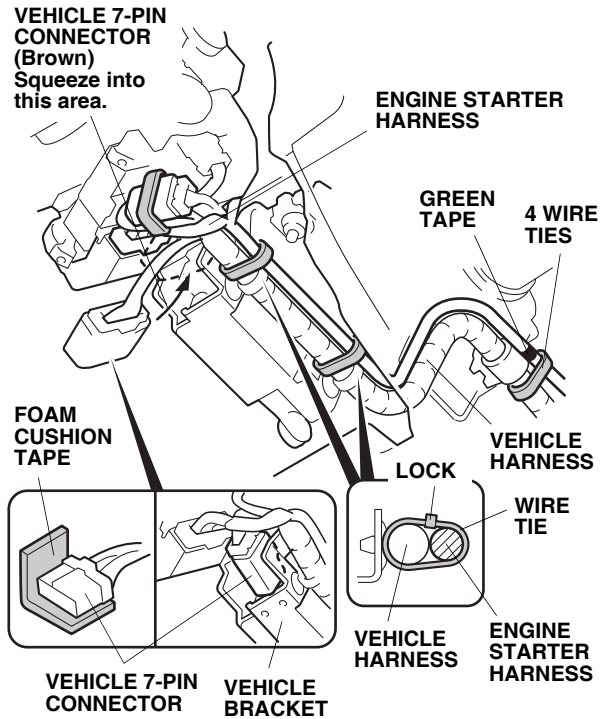


41. Secure the engine starter harness to the vehicle harness with four wire ties in the areas shown. Note the locks on the wire ties face up.
42. Remove the lower steering column support bracket bolt. Attach the relay bracket to the steering column support bracket and reinstall the steering column support bracket bolt.

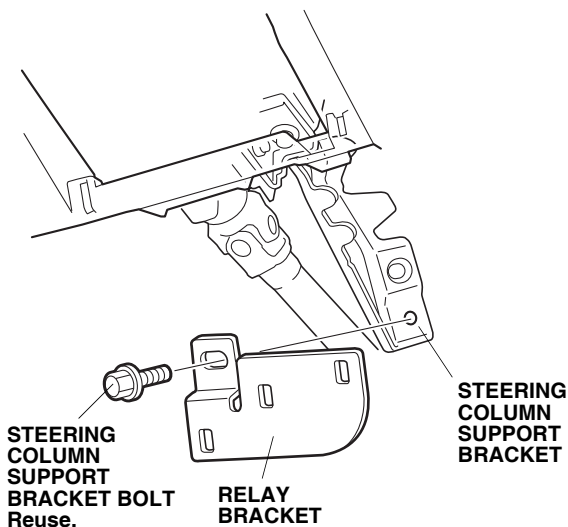

43. To the right of the steering shaft, locate the sub joint box. Using a small flat-tip screwdriver, unplug the vehicle 6-pin connector from the sub joint box. Plug the engine starter harness 6-pin connectors into the vehicle 6-pin connector and the subjoint box.

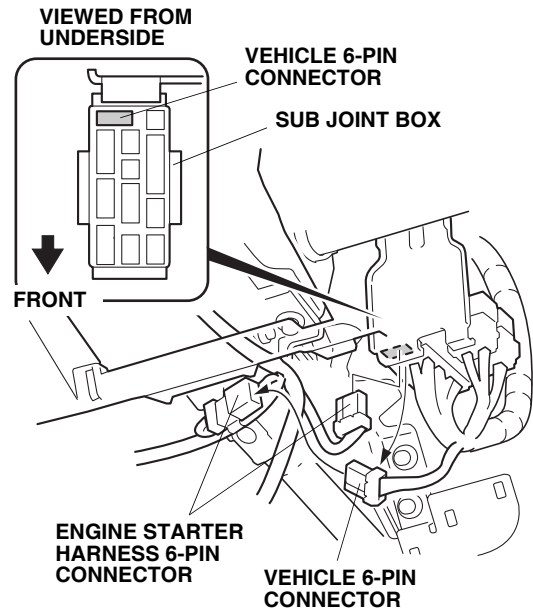

44. Attach the relay blocks and fuse case to the relay bracket.

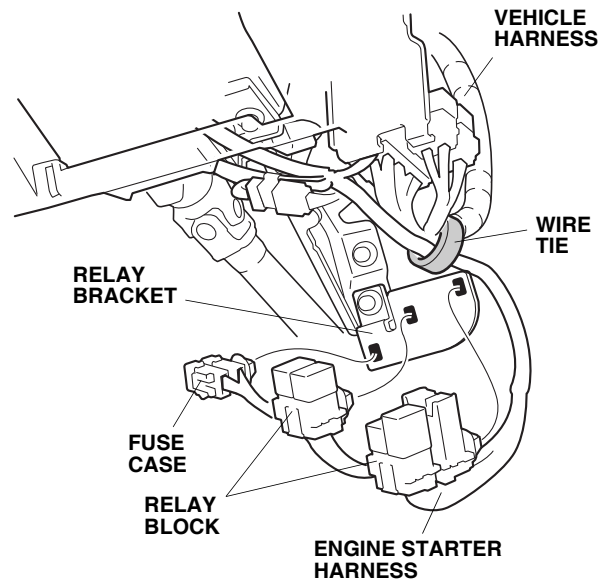


45. Secure the engine starter harness to the vehicle harness using one wire tie.


Without driver's dashboard under cover, go to step 48.

With driver's dashboard under cover, continue with step 46.

46. Measure the indicated dimension on the instrument panel and mark with a felt-tip pen and a punch.

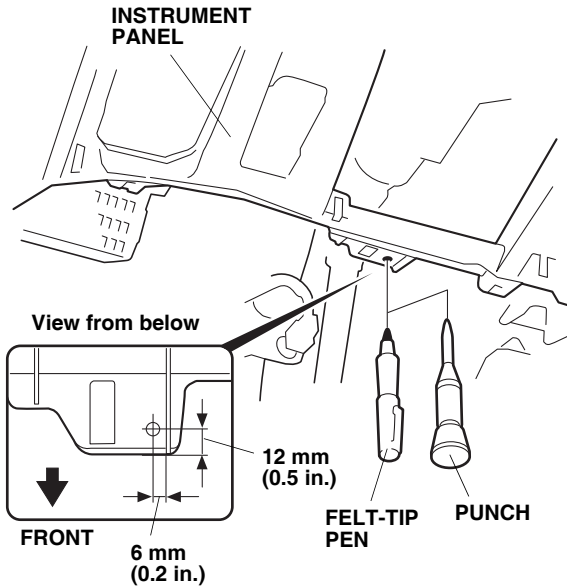


47. While wearing eye protection, drill a 3 mm hole, and then a 7 mm hole at the marked position of the instrument panel. Using a file, remove any burrs at the edge of the hole you made.

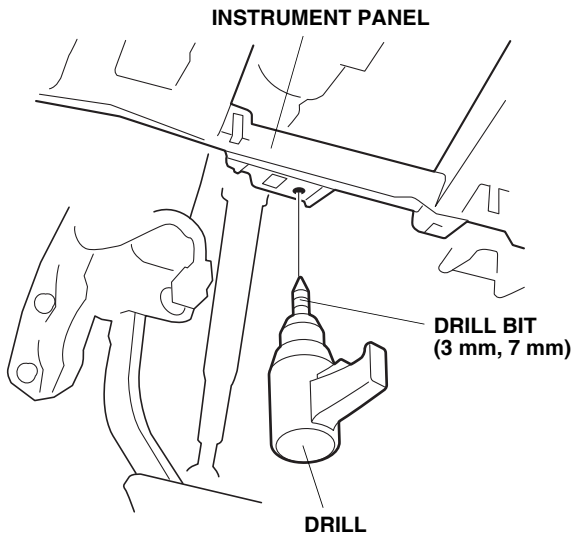


48. Secure the engine starter harness to the instrument panel using a wire tie.

- **With driver's dashboard under cover:** Secure in the hole you drilled in the instrument panel.
- **With Driver's dashboard under cover:** Secure through the existing hole.

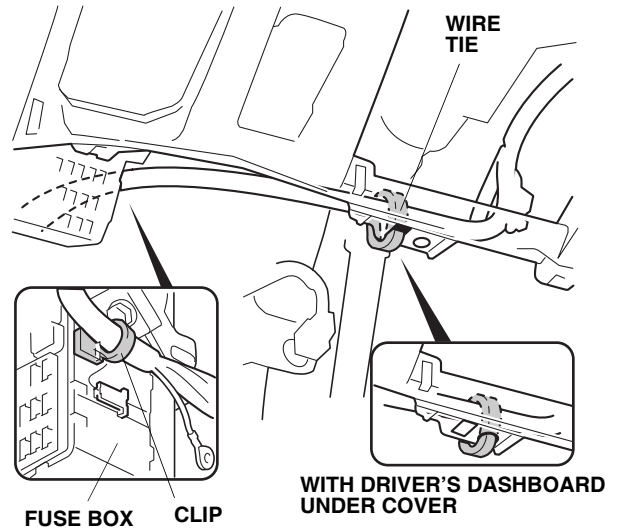


49. Use the clip on the engine starter harness to secure the engine starter harness to the fuse box.
50. Disconnect the vehicle 42-pin, 4-pin, and 2-pin connectors.

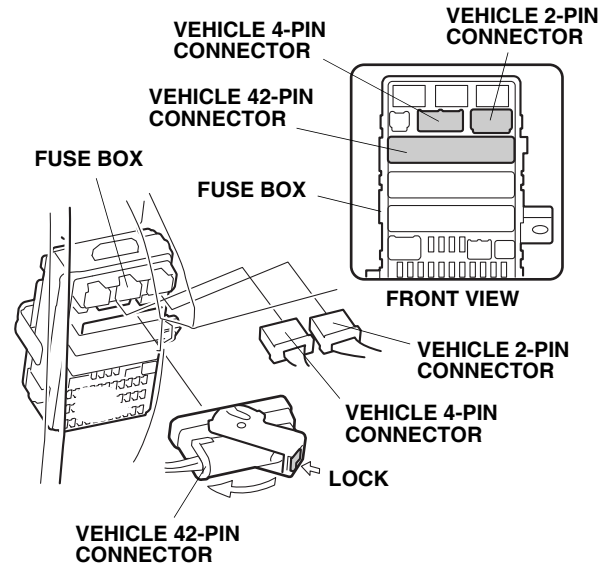

51. Plug the engine starter harness 4-pin and 2-pin connectors into the fuse box.


NOTICE

Check that the engine starter harness 4-pin and 2-pin connectors are securely connected to the fuse box. Loose connectors can cause the engine to stall.

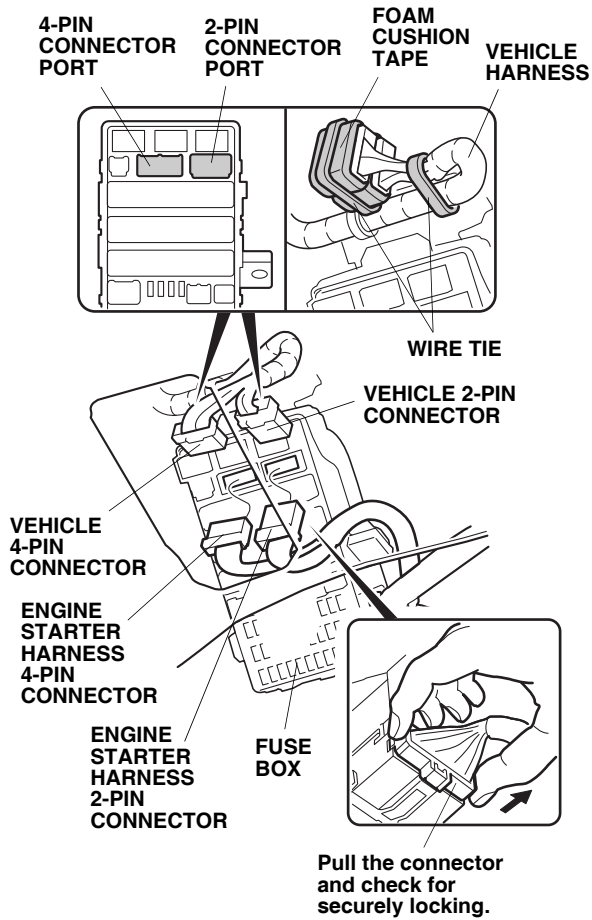


52. Wrap foam cushion tape around the vehicle 2-pin and 4-pin connectors, then secure them together with one wire tie. Then, secure the vehicle harness with one wire tie. Reconnect the vehicle 42-pin connector.


53. Connect the engine starter harness 23-pin connectors to each other and secure them with one wire tie to the vehicle harness.

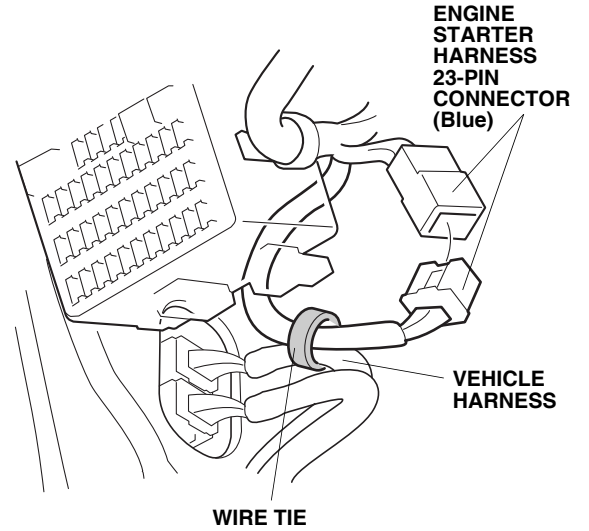

54. Unplug the white vehicle 14-pin connector at the front lower pillar behind the fuse box, and plug the engine starter harness 14-pin connectors in between. Attach the engine starter harness 14-pin connector to the vehicle 14-pin connector.

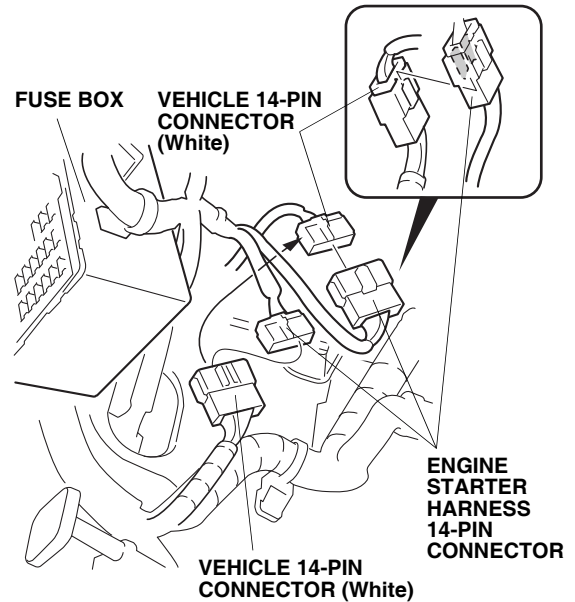


55. Install the clip on the engine starter harness to the fuse box bracket behind the fuse box.

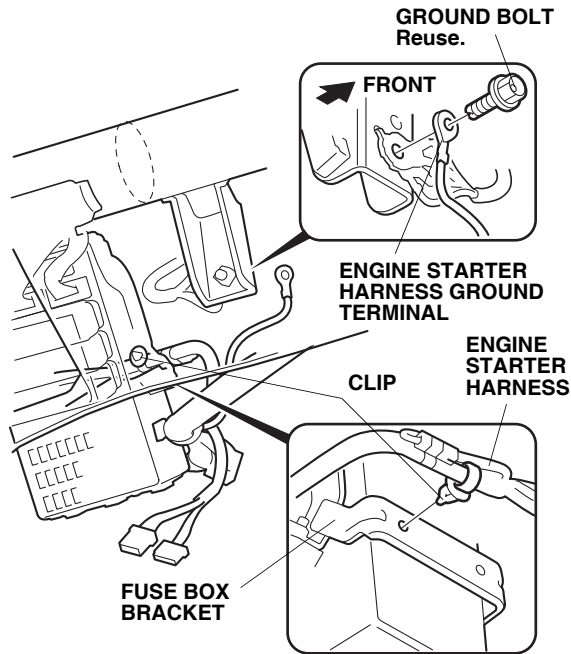


56. Remove the ground bolt from the vehicle. Secure the engine starter harness ground terminal with the ground bolt you just removed.

Installing the Control Unit


57. Connect the antenna cable terminal and the engine starter harness 18-pin connector to the control unit.

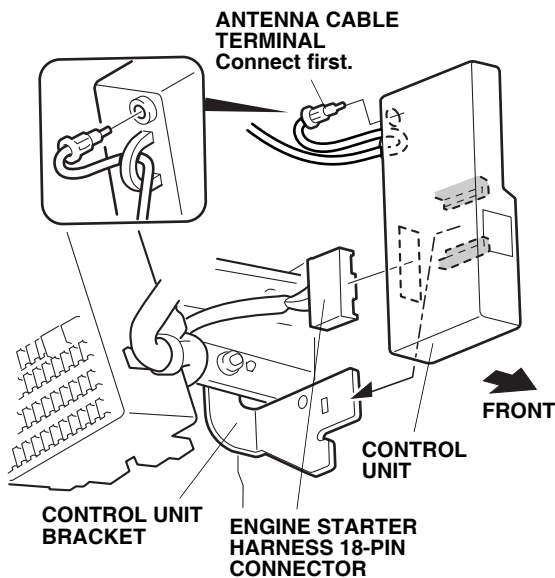

58. Install the control unit on the control unit bracket.
59. Bundle the excess antenna cable with two wire ties and secure it to the vehicle harness with one wire tie.

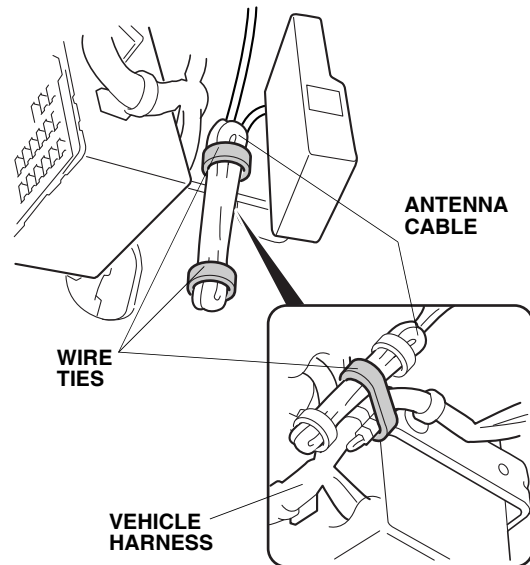

60. Using isopropyl alcohol on a shop towel, clean the area where the engine starter label will attach.

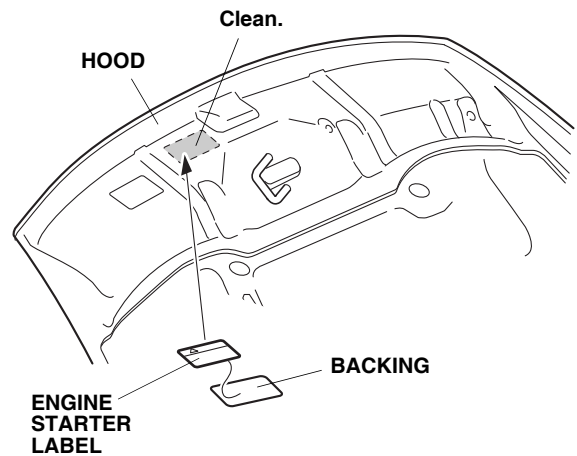


61. Remove the backing from the engine starter label. Attach the engine starter label to the back of the hood.


62. Check that all wire harnesses are routed properly and all connectors are plugged in.
63. Reinstall all removed parts. Check that all clips and other fasteners are installed securely. Take care not to pinch the airbag with a clip during reinstallation of the front pillar trim. Do not push the front pillar trim excessively.
64. Reconnect the negative cable to the battery. Check that the electrical accessory and other electrical systems function properly.
65. Perform "REMOTE ENGINE STARTER REGISTRATION" and "FUNCTION CHECK".
66. Enter the customer's radio anti-theft code, and reset the radio station presets.
67. Reset the clock.

REMOTE ENGINE STARTER REGISTRATION

1. Acquire the PCM code from ISIS.
2. Connect the HDS tester to the OBD II data link connector, then turn the ignition switch to ON (II).
3. Start the HDS, and click the car icon.

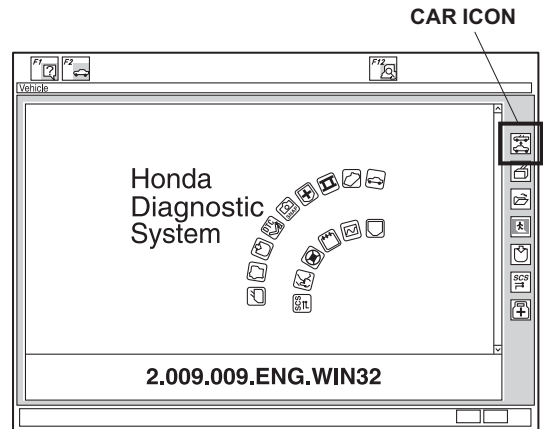


4. Input the VIN and other required information into the HDS, then click the check button.

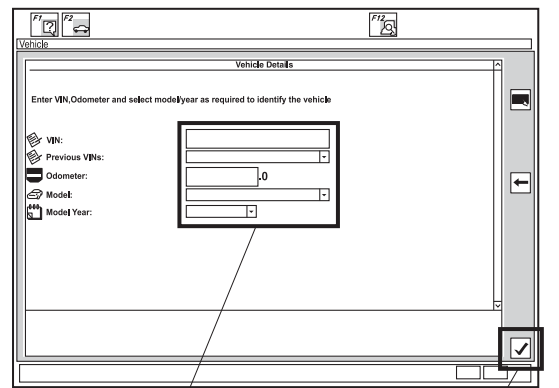


Input the VIN and other required information.

CHECK BUTTON


5. Select **Honda Systems**, then click the check button.

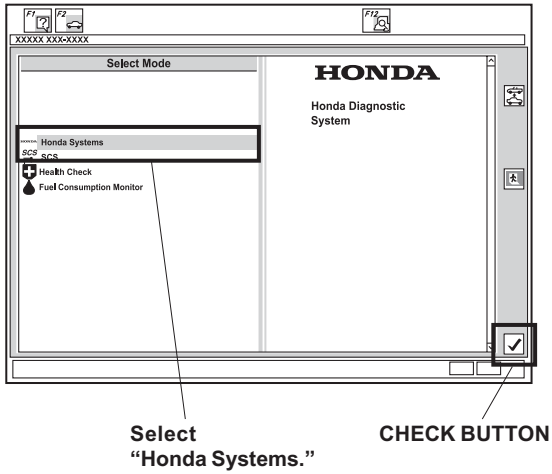


7. A **REMARKS** message will display. Click the check button.

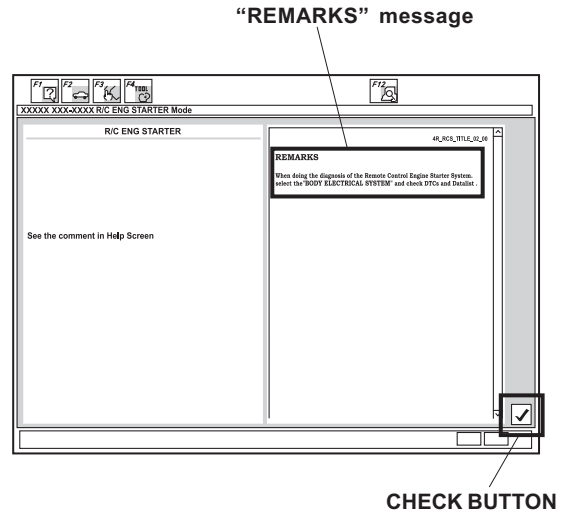

6. Select the **R/C ENG STARTER** and click the check button.

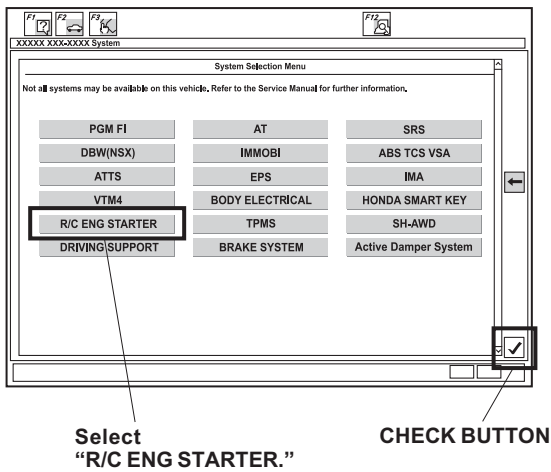


8. Select **REGISTER REMOTE CONTROL ENGINE STARTER UNIT**, then click the check button.

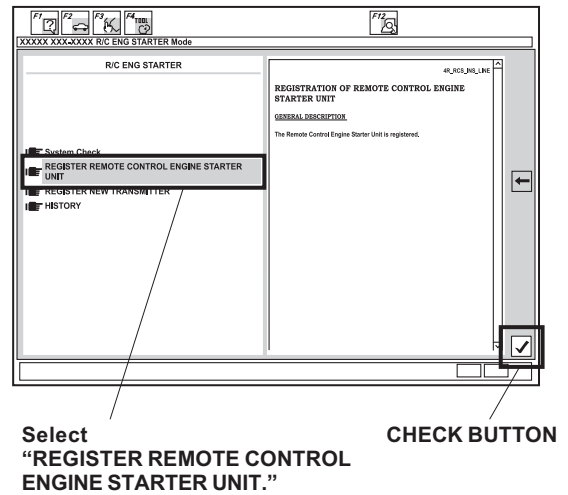


- The following message will display: **Obtain PCM-code (IMMOBILIZER PCM CODE) from iN. This vehicle's VIN will be required to obtain the password. (USA)**. Click the check button.

"Obtain PCM-code" message

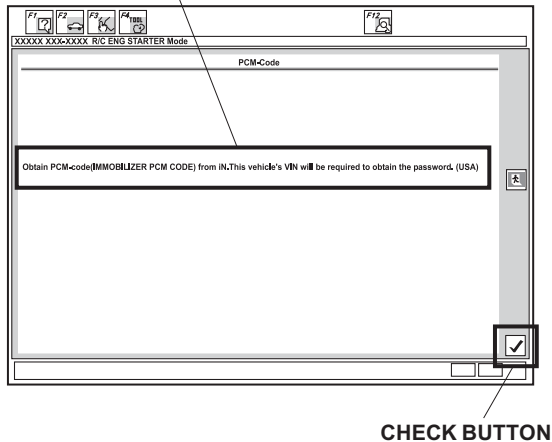


- Input the PCM code, then click the check button.
NOTE: To ensure security, the PCM code (password) is changed everyday, so it is impossible to register the remote engine starter if the date of the PCM code acquisition and registration are different. The date of the HDS tester should also be the same.

Input the PCM code.

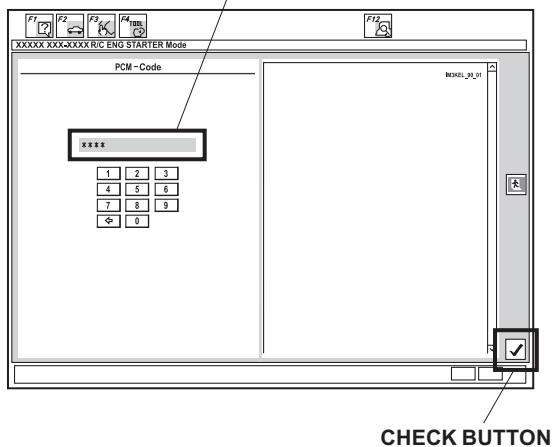


- The following message will display: **The registration of the Remote Control Engine Starter Unit has been completed**. Click the check button.

"Registration" message

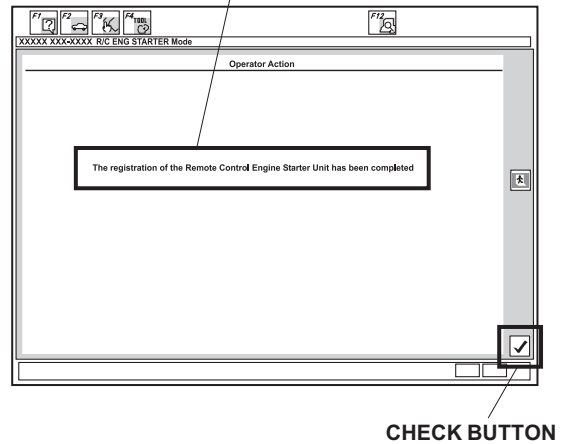

- The following message will display: **Check that the engine can be started by the Transmitter**. Click the check button.

"Check that the engine can be started by the Transmitter"

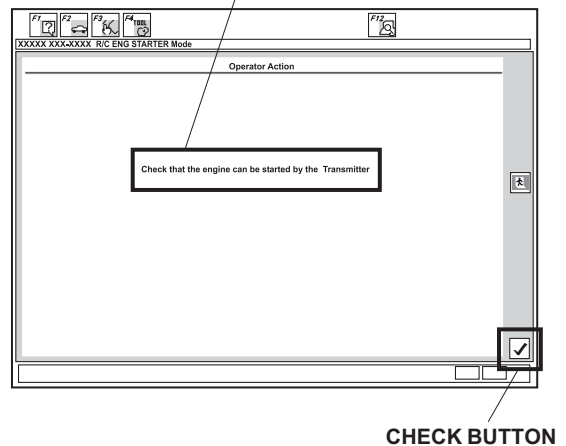

- Perform the function test on the next page, then disconnect the HDS.

FUNCTION CHECK

Operating Conditions

- The hood is closed.
- Shift lever is in park.
- The key is not in the ignition switch.
- All doors and trunk are closed and locked.

Inspection

1. Press the command button, and then, within 1 second, press the start button on the transmitter. The engine should start if all operating conditions are met.

Does the engine start?

Yes - Operation is normal.

No:

- | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none">• Make sure all operating conditions are met.• Check the engine starter harness connections.• Connect the HDS and check for an indicated failure.
(Refer to the appropriate service manual for details.) |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

2. Press the command button on the transmitter and, within 1 second, press the stop button. The engine should stop.

Does the engine stop?

Yes - Operation is normal.

No - Check the engine starter harness connections.

3. After the engine has stopped, start the engine again, and check that the engine stops after each of the following conditions:

NOTE: After each test the ignition key must be cycled, or the driver's door must be opened and closed.


- Move the shift lever out of the P position.
- Unlock or open the doors or the trunk lid.
- Open the hood.
- Insert the key in the ignition switch.
- Press on the brake pedal.

Does the engine stop after each of these tests?

Yes - Operation is normal.

No - Check the engine starter harness connections.

4. Check that the power windows and the moonroof do not function when the engine is started with the transmitter.
5. Press the command button on the transmitter twice and check the vehicle condition on the display.
6. Check the operation of the transmitter when the vehicle is 100 m to 150 m (325 to 490 ft.) away, and when the vehicle is in direct sight.

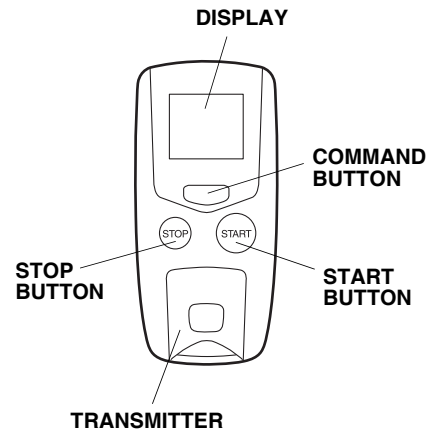

How to Program an Additional Transmitter

1. Connect the HDS to the data link connector.
2. Start the HDS and click on the car icon.
3. Input the vehicle's VIN and other required information.
4. Select **Honda Systems**.
5. Select **R/C Engine Starter**.
6. Select **REGISTER NEW TRANSMITTER**.
7. When "Ready to program the new transmitter" shows, select **ENTER**.
8. Press and release the Command button.
9. Press and release the Stop button.
10. Perform the function check on both transmitters.

NOTE: Only two remotes can be stored in the system's memory.